My Cloud™ EX4

Personal Cloud Storage

Quick Installation Guide

1

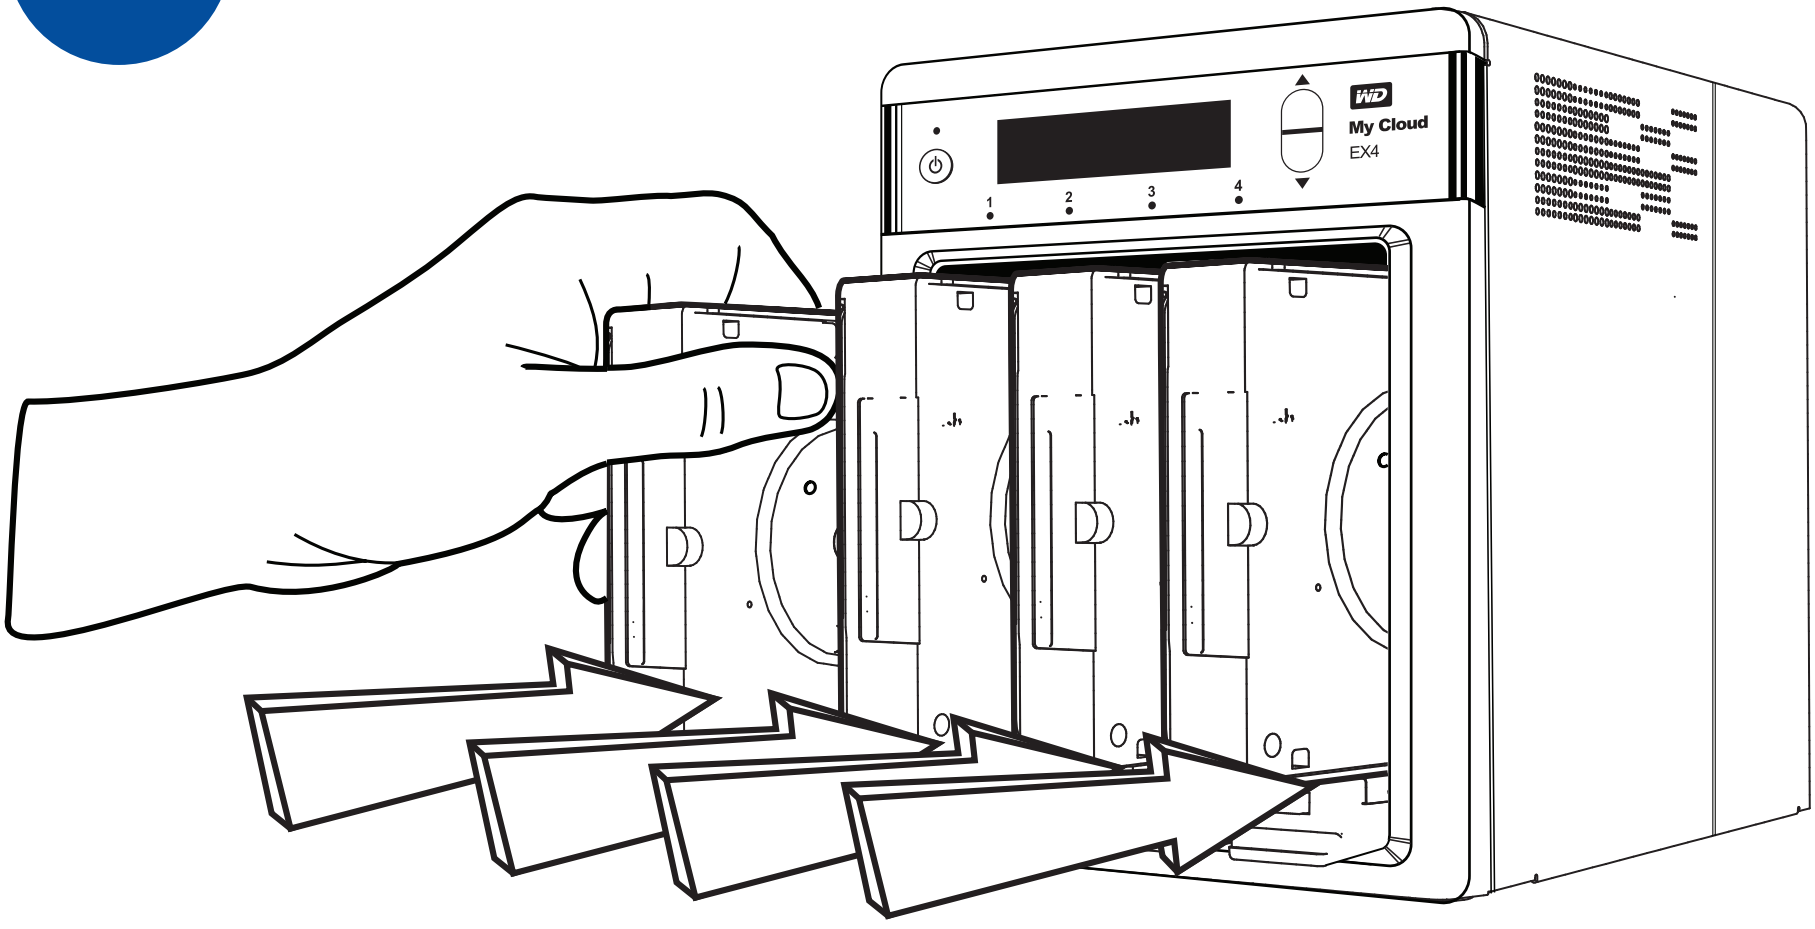

a b c d

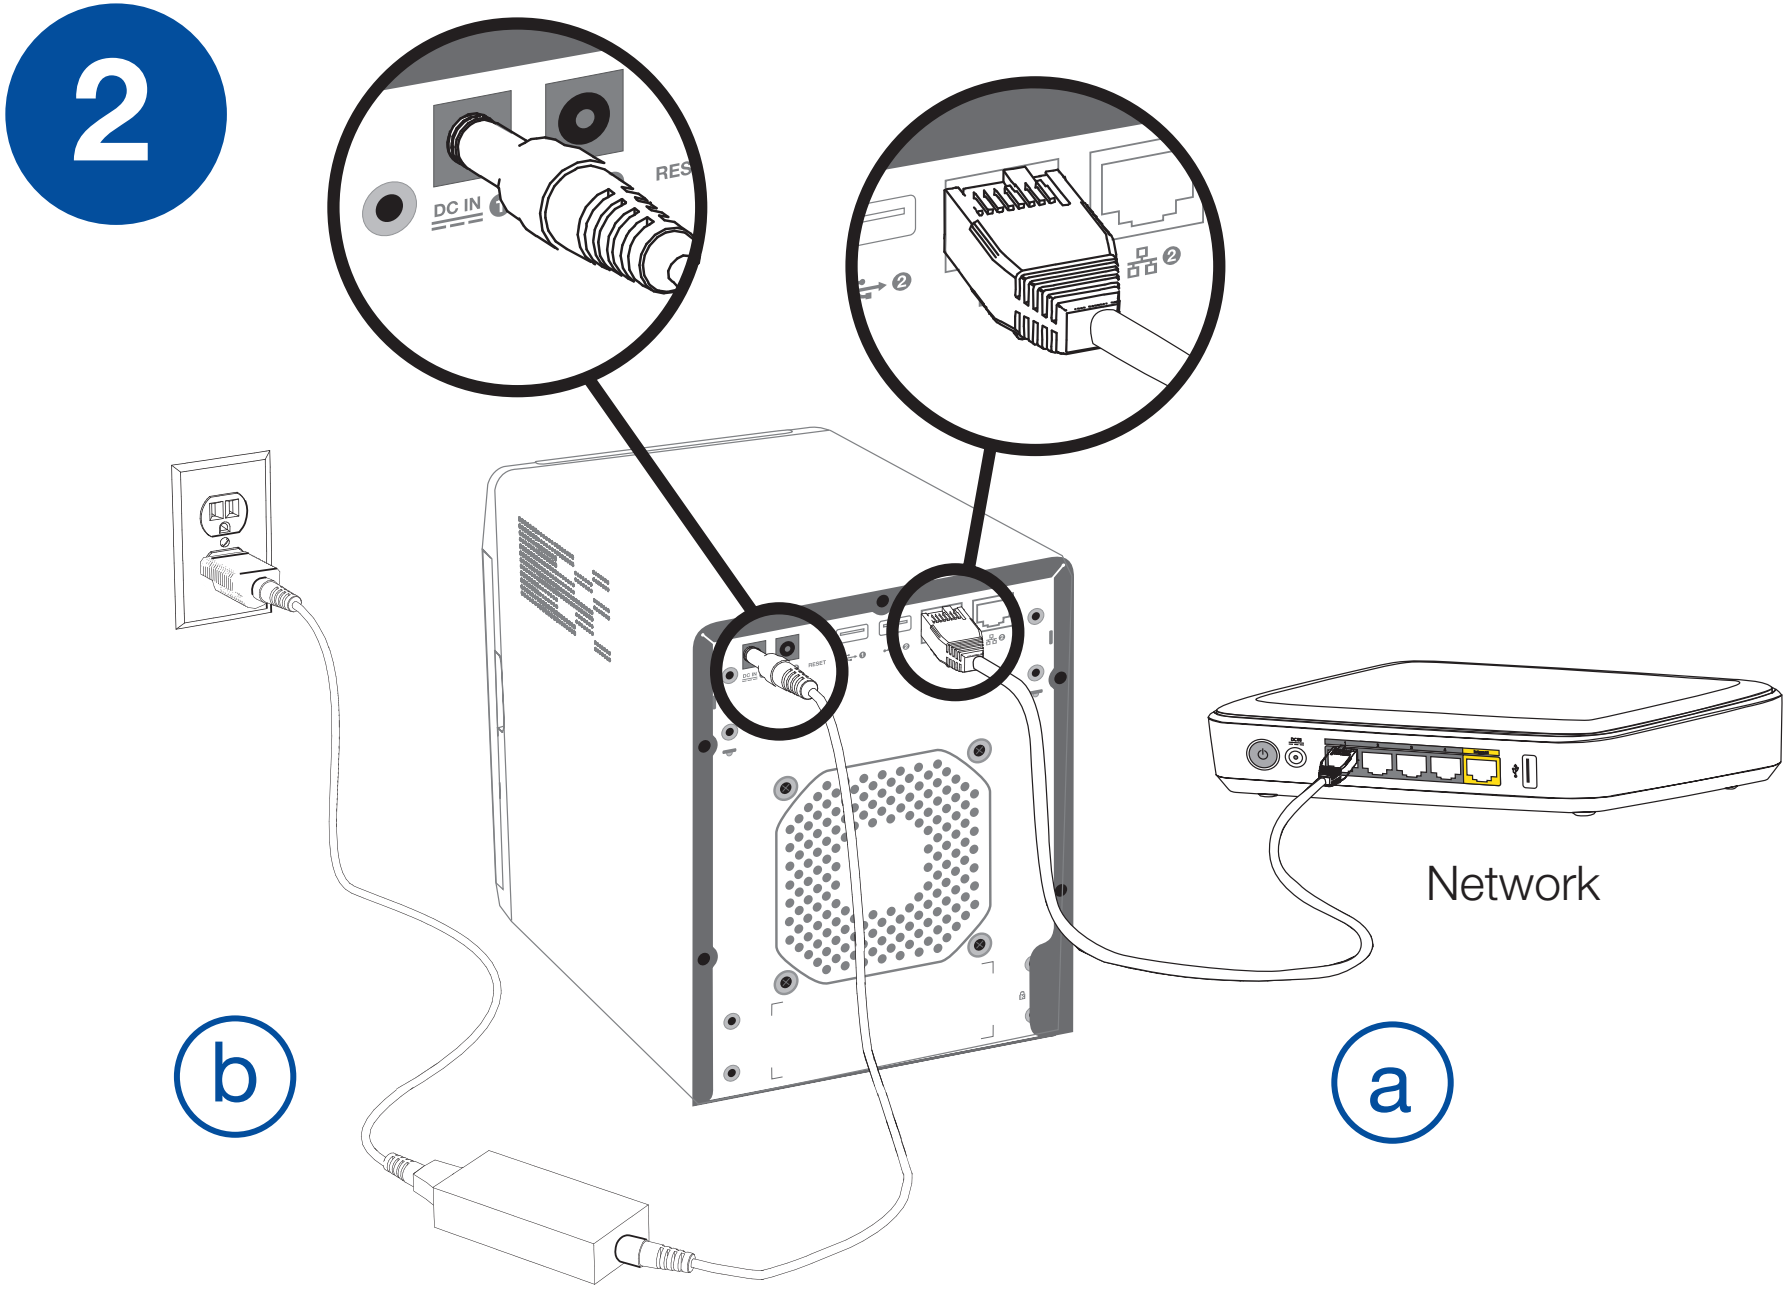
2
DC IN
Network
b
a

Client Computers

3

4

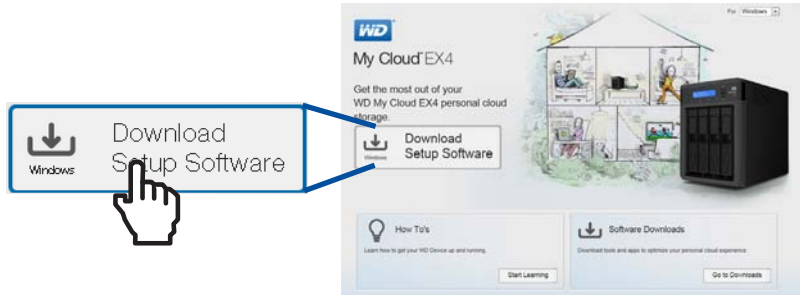

5

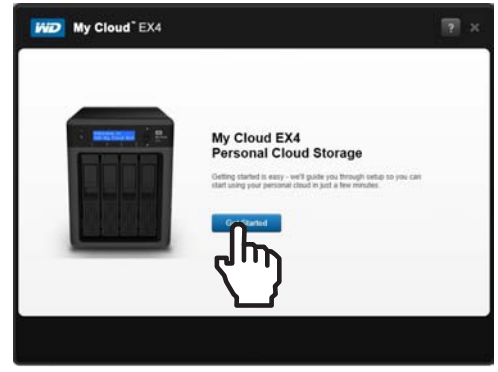

OR

Mobile Devices

3

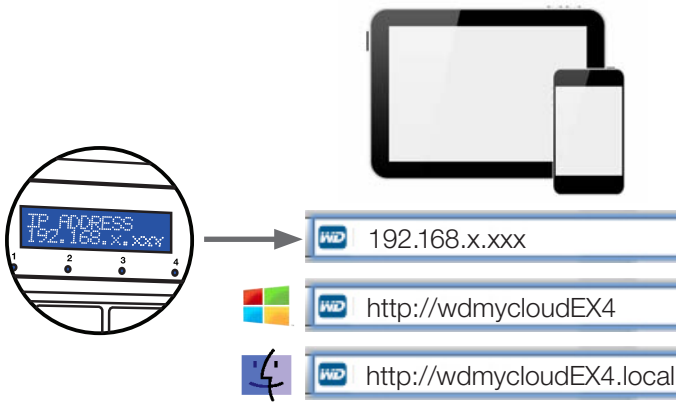

* WD My Cloud EX4 and wireless device must be Wi-Fi® connected to the same network.

4

5

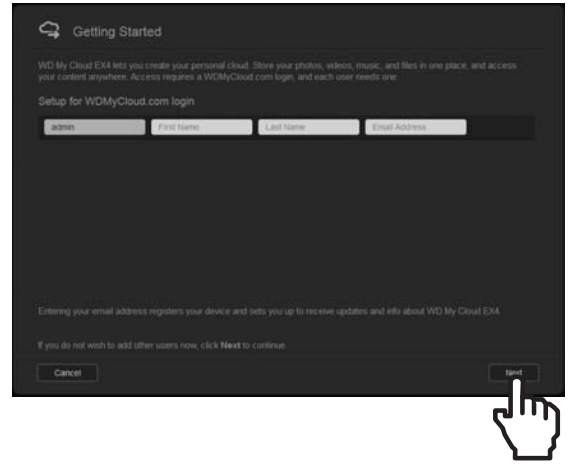

http://products.wd.com/updates

Desktop Apps

WD My Cloud

Mobile Apps

WD My Cloud

WD Photos

http://products.wd.com/wdmycloud/apps

* WD My Cloud EX4 und das Wireless-Gerät müssen über Wi-Fi mit demselben Netzwerk verbunden sein.
* Le WD My Cloud EX4 et le périphérique sans fil doivent être connectés en Wi-Fi au même réseau.
* WD My Cloud EX4 e il dispositivo wireless devono essere connessi via Wi-Fi alla stessa rete.
* WD My Cloud EX4 y el dispositivo inalámbrico deben tener una conexión Wi-Fi a la misma red.
* WD My Cloud EX4 en het draadloze apparaat moeten via Wi-Fi verbonden zijn met hetzelfde netwerk.
* WD My Cloud EX4 oraz urzadzenie bezprzewodowe musza byc połaczone z siecia za pomoca Wi-Fi.
* O WD My Cloud EX4 e o dispositivo sem fio devem estar conectados por Wi-Fi à mesma rede.
* WD My Cloud EX4 og trådløs enhed skal have oprettet Wi-Fi-forbindelse til det samme netværk.
* WD My Cloud EX4 ja langattoman laitteen on oltava Wi-Fi-yhteydessä samaan verkkoon.
* WD My Cloud EX4 og den trådløse enheten må være trådløst koblet til det samme lokalnettverket.
* WD My Cloud EX4 och trådlös enhet måste vara Wi-Fi-anslutna till samma nätverk.
* A WD My Cloud EX4 meghajtónak és a vezeték nélküli eszköznek ugyanarra a hálózatra kell csatlakoznia Wi-Fi kapcsolatok keresztül.
* WD My Cloud EX4 ve kablosuz aygıtın, Wi-Fi üzerinden aynı agına baglı olması gerekir.
* WD My Cloud EX4 a bezdrátové zarízení musí být pripojeny ke stejné síti pomocí pripojení Wi-Fi.
* WD My Cloud EX4 a bezdrôtové zariadenie musia byt pripojené do rovnakej siete pomocou pripojenia Wi-Fi.
* يجب توصيل WD My Cloud EX4 والجهاز اللاسلكي بشبكة Wi-Fi ذاتها.
* Η μονάδα WD My Cloud EX4 και η ασύρματη συσκευή πρέπει να είναι συνδεδεμένες μέσω Wi-Fi στο ίδιο δίκτυο.
* WD My Cloud EX4 およびワイヤレス端末は、同一ネットワークにWi-Fi接続してください。
* WD My Cloud EX4 및 무선 장치는 같은 네트워크에 Wi-Fi로 연결되어 있어야 합니다.
* WD My Cloud EX4 şi dispozitivul fără fir trebuie să fie conectate prin Wi-Fi la aceeaşi reţea.
* WD My Cloud EX4 и беспроводное устройство должны быть подключены по Wi-Fi к одной и той же сети.
* WD My Cloud EX4 和无线设备必须通过 Wi-Fi 连接到同一网络。
* WD My Cloud EX4 和無線裝置必須透過 Wi-Fi 連線至相同的網路。

Technical Support Services

http://support.wd.com
http://www.wd.com

If you encounter problems with this product, please contact WD Technical Support.

United States/North America	
English	800.ASK.4WDC (800.275.4932)
Spanish	800.832.4778
Asia Pacific (toll free where available)	+800.6008.6008
Asia Pacific (non toll free)	+65.6848.6008
Japan	00 531 650442/ 0120 994 120
Australia & New Zealand	+800.2275.4932
Europe (toll free*)	0800.27549338
** Austria, Belgium, Denmark, France, Germany, Ireland, Italy, Netherlands, Norway, Spain, Sweden, Switzerland, United Kingdom*	
Europe (non toll free)	+31.880062100
Russia	8 10 8002 335 50110
Middle East	0031.880062100

Western Digital, WD, and the WD logo are registered trademarks of Western Digital Technologies, Inc. in the U.S. and other countries; and WD My Cloud is a trademark of Western Digital Technologies, Inc. in the U.S. and other countries. Other marks may be mentioned here in that belong to other companies. Specifications subject to change without notice.

© 2013 Western Digital Technologies, Inc. All rights reserved.

Western Digital
3355 Michelson Drive, Suite 100
Irvine, California, U.S.A. 92612

4079-705078-800 Aug 2013